

**Test Protocol:**


**Items Tested:** Six 1000ml IV Pouches inside 8in cube box inside 15.5x14x13.5 Koldtogo Extreme Liner 12510

**Object of test:** Show that temperature of IV pouches does not exceed 85F during 24 hour period  
Show that IV Pouches do not freeze during test.

**Test Procedure:** Six 1000mL IV pouches placed inside inner cardboard box of 8x8x8 in. Box placed inside Extreme Liner 12510 with 4x 2lbs frozen gel packs + 4x 1lbs gel packs. IV pouches at room temperature (65F) at test start. Test duration set at 24 hours.

**Findings:** After 24 Hours, gel packs still frozen. IV Pouches T never exceeded 85F during 24 h period.  
After 24 hours, IV Pouches temperature never dropped below 37F.  
Test is success.

**Probes Placement:**

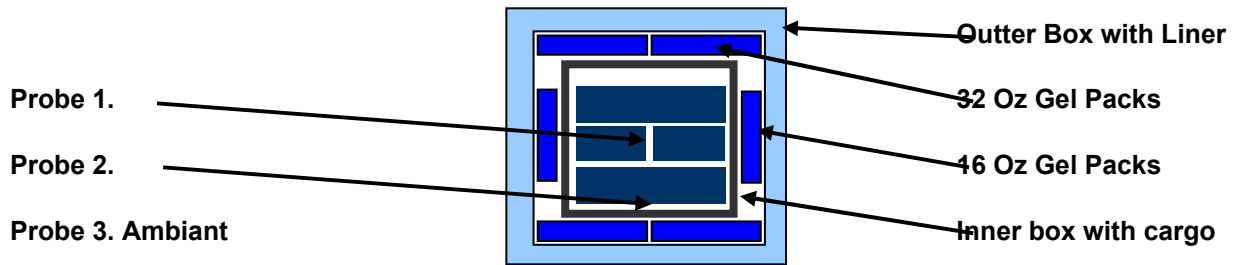

**Test Results:**

**Medtraveller Extreme Liner 12510 with 6x 1L IV pouches**

